

**Attuatore On/Off a radiofrequenza 1 modulo CI**

N. ord. : 5448 02

**Istruzioni per l'uso****1 Indicazioni di sicurezza**

Il montaggio e il collegamento di dispositivi elettrici devono essere eseguiti da elettricisti.

Possibilità di gravi infortuni, incendi e danni a oggetti. Leggere e rispettare tutte le istruzioni.

Pericolo di scossa elettrica. Prima di effettuare qualsiasi intervento sull'apparecchio o sul carico, staccare l'apparecchio dall'alimentazione elettrica.

Pericolo di scossa elettrica. L'apparecchio non è adatto alla messa fuori tensione. Anche se l'apparecchio è spento, il carico può essere sotto tensione, poiché la disinserzione è unipolare.

Gli apparecchi di riduzione non possono essere inseriti in successione e devono essere facilmente accessibili.

La radiotrasmissione avviene su un canale di trasmissione non esclusivo e quindi non è adatta per le applicazioni nel settore della tecnica di sicurezza, ad es. per l'arresto di emergenza e la chiamata di emergenza.

Queste istruzioni costituiscono parte integrante del prodotto e devono essere conservate dal cliente finale.

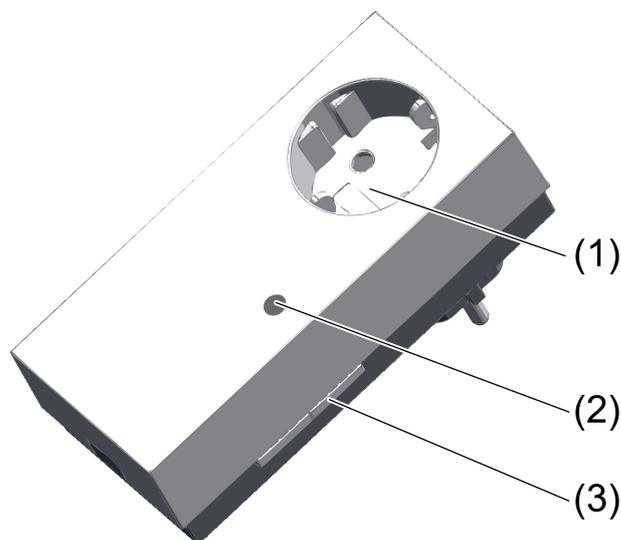
**2 Struttura dell'apparecchio**

Figura 1

- (1) Presa SCHUKO® con protezione dal contatto potenziata
- (2) LED di stato rosso, ricoperto
- (3) Tasto **Prog**

**3 Funzione****Usò conforme**

- Azionamento dell'illuminazione

- Comando tramite radiotrasmittitori eNet adeguati
- Montaggio all'interno alla presa SCHUKO® o alla presa con pin di terra

### Caratteristiche del prodotto

- Segnalazione di stato al radiotrasmittitore
- Funzionamento scenario possibile
- Uscita attivabile tramite tasto **Prog**
- Visualizzazione di stato tramite LED

Impostabile tramite server eNet:

- Funzione tasto
- Funzione di lampeggiamento
- Tempo di post-funzionamento
- Attivazione/disattivazione ritardata
- Funzionamento contatto NC e contatto NA
- Preavviso di disattivazione
- Tempo minimo di ripetizione dell'accensione
- Blocco comandi
- On-permanente, Off-permanente

Funzioni aggiuntive con server eNet:

- Trasmissione radio completamente criptata (AES-CCM) a partire dalla versione 2.0 del server eNet
- Aggiornamento del software apparecchio
- Funzione ripetitore
- Selezione memoria errori

### Comportamento in seguito al ripristino della tensione di rete

Con il server eNet, il comportamento in seguito al ripristino della tensione di rete è parametrizzabile. Impostazione di fabbrica: Off.

## 4 Comando

-  Con esercizio tramite server eNet, il comando e la segnalazione possono differire da quanto descritto nelle presenti istruzioni.

### Comando tramite radiotrasmittitori

Il comando avviene tramite radiotrasmittitori, prestare attenzione alle linee del radiotrasmittitore.

### Comando tramite tasto Prog

- Premere brevemente il tasto **Prog**.  
Il carico si accende o si spegne.  
Il LED di stato si accende: l'uscita è attivata.  
LED di stato off: l'uscita è disattivata.

## 5 Informazioni per elettrotecnici

### 5.1 Montaggio e collegamento elettrico



#### PERICOLO!

**Scossa elettrica in caso di contatto con componenti sotto tensione.**

**La scossa elettrica può provocare il decesso.**

**Prima di effettuare qualsiasi intervento sul carico, staccare l'apparecchio dall'alimentazione elettrica!**

### Collegamento dell'apparecchio

Per una buona qualità di trasmissione, mantenere una distanza adeguata da possibili fonti di disturbo, ad. es. superfici metalliche, forni microonde, impianti Hi-Fi- e TV, apparecchi di alimentazione o trasformatori.

- Inserire l'apparecchio nella presa.

- Inserire il carico nell'apparecchio.
- Effettuare la messa in funzione (v. cap. Messa in funzione).

## 5.2 Messa in funzione

- i** In alternativa alla messa in funzione descritta, è possibile azionare l'attuatore anche tramite server eNet.

### Collegare l'attuatore ai radiotrasmettitori

Il carico è acceso.

- Premere il tasto **Prog** per oltre 4 secondi.  
Il carico si accende.  
Dopo 4 secondi il LED di stato lampeggia e il carico si spegne. L'attuatore si trova in modalità di programmazione per ca. 1 minuto.
  - Regolare il radiotrasmettitore in modalità di programmazione (vedere le istruzioni relative al radiotrasmettitore).
  - Inviare telegramma al radiotrasmettitore.  
Il LED di stato dell'attuatore si illumina per 5 secondi.  
L'attuatore è collegato al radiotrasmettitore. L'attuatore e il radiotrasmettitore lasciano automaticamente la modalità di programmazione.
- i** Se il LED di stato dell'attuatore lampeggia per ca. 5 secondi o 3 volte a distanza di 1 secondo, la procedura di programmazione non è stata effettuata con successo. Nell'attuatore o nel radiotrasmettitore tutti gli spazi di memorizzazione sono occupati.
- i** I tasti Tutto On e Tutto Off di un radiotrasmettitore vengono connessi automaticamente all'attuatore in occasione della prima connessione al radiotrasmettitore.
- i** I tasti scenario vanno connessi separatamente.

### Separare la connessione a un altro radiotrasmettitore

- Ripetere le stesse fasi utilizzate per la connessione (vedere Connessione dell'attuatore ai radiotrasmettitori).  
Il LED di stato lampeggia velocemente per 5 secondi. L'attuatore è separato dal radiotrasmettitore. L'attuatore e il radiotrasmettitore lasciano automaticamente la modalità di programmazione.
- i** In caso di presenza di più connessioni o tasti scenario per un radiotrasmettitore, ognuno di essi va separato singolarmente.
- i** I tasti Tutto On e Tutto Off di un radiotrasmettitore vengono separati automaticamente in occasione della separazione dell'ultima connessione dell'uscita corrispondente dal radiotrasmettitore. La separazione manuale non è possibile.

### Ripristinare le impostazioni di fabbrica per l'apparecchio

Tutte le connessioni ai radiotrasmettitori vengono separate e i parametri vengono ripristinati sull'impostazione di fabbrica.

- i** Nei radiotrasmettitori le connessioni vengono mantenute e vanno cancellate separatamente.

Il carico è acceso

- Premere il tasto **Prog** per almeno 20 secondi.  
Il carico si accende.  
Dopo 4 secondi il LED di stato lampeggia e il carico si spegne. Dopo 20 secondi il LED di stato lampeggia più velocemente.
- Rilasciare il tasto **Prog** e premerlo di nuovo brevemente entro 10 secondi.  
Il LED di stato lampeggia più lentamente per ca. 5 secondi.  
L'impostazione di fabbrica è stata ripristinata sull'apparecchio.

## 6 Appendice

### 6.1 Dati tecnici

Tensione nominale	AC 230 V ~
Frequenza di rete	50 / 60 Hz
Temperatura ambiente	-5 ... +35 °C
Grado di protezione	IP 20
Corrente di collegamento a 35 °C	
Ohmico	16 A (AC1)
Lampade fluorescenti	4 AX
Min. corrente di coll. AC	100 mA
Tipo di contatto	μ
Potenza standby	0,5 W
Potenza di collegamento a 35°C.	
Lampade a incandescenza	2300 W
Lampade alogene HV	2000 W
Trasformatori elettronici	1500 W
Trasformatori induttivi	1000 VA
Lampade LED HV	tip. 500 W
Lampade fluorescenti compat.	tip. 500 W
Lampade fluorescenti non compensate	920 VA
Carico capacitivo	690 VA (560 μF)
Dimensioni L×H×P	57×127×78 mm
Frequenza radio	868,0 ... 868,6 MHz
Potenza di trasmissione	max. 20 mW
Portata del trasmettitore in campo libero	tip. 100 m
Categoria di ricezione	2

### 6.2 Lista dei parametri

I parametri dell'apparecchio possono essere modificati tramite server eNet:

#### Device and channels

Parameters	Setting options, Basic setting	Explanations
Function	Light, switching, unused Basic setting: Light	<p>Light The channel is integrated for the "Lighting" central function in the <b>eNet SMART HOME app</b>.</p> <p>Switching The channel is not integrated in any central function.</p> <p>Unused The channel is not displayed in the <b>eNet SMART HOME app</b> and is disabled for use in the commissioning interface.</p>

<p>Operating mode</p>	<p>Switching operation                  Push-button operation                  Flashing                  Continuous on                  Continuous off                  Basic setting: Switching operation</p>	<p>Switching operation                  After switch-on, the device remains stable in the "On" state, and stable in the "Off" state after switch-off.</p> <p>Push-button operation                  The device switches "On" when any channel button of a radio transmitter is pressed and "Off" when the button is released. It is irrelevant whether the "On" or "Off" channel button is pressed.</p> <p>Flashing                  Switch-on starts flashing and switch-off stops flashing. The default flash frequency is 1 Hz. This frequency is also the maximum flash frequency. The flash frequency can be changed using parameters. The parameter "Switch-off delay" is used for the pulse time and the parameter "Switch-on delay" for the pause time.</p> <p>Continuous on                  The output switches to continuously "On". All operations of radio transmitters and the <b>Prog</b> button are ignored.</p> <p>Continuous off                  The output switches to continuously "Off". All operations of radio transmitters and the <b>Prog</b> button are ignored.</p>
-----------------------	--	---

### Advanced device settings

Parameters	Setting options, Basic setting	Explanations
Manual commissioning	On, Off Basic setting: On	Disables manual commissioning for all device channels. In the "Off" setting, the device cannot be reset to the factory setting.
Repeater mode	On, Off Basic setting: Off	In addition to its other functions, the device can be used as a repeater. In the "On" setting, the device repeats all the received telegrams.

### Channel settings

Parameters	Setting options, Basic setting	Explanations
------------	--------------------------------	--------------

Switch-on delay	0 s ... 24 h Basic setting: 0 s	The load switches on after a delay. Repeated switch-on commands restart the delay time. If the load has not yet been switched on due to the delay when a switch-off command comes, then the load will remain off. In Flashing operating mode, the pause time is set using this parameter. Comment: The set times apply to operation using radio transmitters. The relay is switched immediately when the <b>Prog</b> button is pressed.
Switch-off delay	0 s ... 24 h Basic setting: 0 s	The load switches off after a delay. Repeated switch-off commands restart the delay time. If the load has not yet been switched off due to the delay when a switch-on command comes, then the load will remain on. In Flashing operating mode, the pulse times are set using this parameter. Comment: The set times apply to operation using radio transmitters. The relay is switched immediately when the <b>Prog</b> button is pressed.
Run-on time	0 s ... 24 h Basic setting: 0 s	As soon as a run-on time has been entered, the actuator will no longer remain on permanently, but only for the length of the run-on time. The run-on time is restarted if actuation is repeated. This parameter is directly connected to the "Manual switch-off of run-on time" parameter. Comment: The set times apply to operation using radio transmitters. The relay is switched immediately when the <b>Prog</b> button is pressed.
Manual switch-off of the run-on time	On, Off Basic setting: Off	Allows manual switch-off of a running run-on time. If the parameter is switched off, then a switch-off command will also switch the actuator on. This parameter is directly connected to the "Run-on time" parameter.

Operating hours	0...65535 Basic setting: Current value	The time is counted during which the load is physically switched on (relay contact closed). This parameter can be reset to "0", for example after exchanging the load. The Reset button is used to reset the meter to "0". The device must be programmed to apply the change.
-----------------	---	---

### Extended channel settings

Parameters	Setting options, Basic setting	Explanations
Operating mode	Switching operation Push-button operation Flashing Continuous on Continuous off Basic setting: Switching operation	See Device and channels.
Manual commissioning	On, Off Basic setting: On	Blocks manual commissioning for the device channel. In the "Off" setting, the device cannot be reset to the factory setting.
Local Operation	On, Off Basic setting: On	Blocks the output for operation using the <b>Prog</b> button.
Behaviour on voltage return	On Off Last value Configured brightness Basic setting: Off	Defines the behaviour of the output after voltage return.
Timer behaviour, voltage return	Off Restart Basic setting: Off	Specifies whether the timers for switch-on delay, switch-off delay and run-on time remain off after voltage return or whether they restart. Directly connected to the parameters "Switch-on delay", "Switch-off delay" and "Run-on time".
Behaviour after the end of the disabling function	On Off no change Last value Basic setting: No change	Behaviour of the output when a block is removed.
Manual saving of the scene values	On, Off Basic setting: On	Disables the saving of the current actuator state (On/Off) as scene value in an actuator for a command via a transmitter.

Switch-off warning	On, Off Basic setting: Off	If the switch-off warning is active, the light is not switched off directly. The light goes off 30, 15 and 6 seconds before permanent switch-off. During the switch-off warning, a switch-on telegram effects direct switch-on. It is not possible to terminate the time using a switch-off telegram.
Priority, lock-out protection	0...4 Basic setting: 1	Specifies the priority for recalling and removing a scene of type Lock-out protection for the channel.
Activate lock-out protection switching state	On, Off Basic setting: Off	Defines the behaviour of the output on activating the lock-out protection.
Deactivate lock-out protection switching state	On, Off Basic setting: Off	Defines the behaviour of the output on deactivating the lock-out protection. Only visible when the priority for the lock-out protection is 0.
Priority, restraint	0...4 Basic setting: 2	Specifies the priority for recalling and removing a scene of type Restraint for the channel.
Activate forced operation switching state	On, Off Basic setting: On	Defines the behaviour of the output on activating the forced operation.
Deactivate forced operation switching state	On, Off Basic setting: Off	Defines the behaviour of the output on deactivating the forced operation. Only visible when the priority for the forced operation is 0.
Priority, wind alarm	0...4 Basic setting: 3	Specifies the priority for recalling and removing a scene of type Wind alarm for the channel.
Activate wind alarm switching state	On, Off Basic setting: Off	Defines the behaviour of the output on activating the wind alarm.
Deactivate wind alarm switching state	On, Off Basic setting: Off	Defines the behaviour of the output on deactivating the wind alarm. Only visible when the priority for the wind alarm is 0.
Priority, sun protection	0...4 Basic setting: 0	Specifies the priority for recalling and removing a scene of type Sun protection for the channel.
Activate sun protection switching state	On, Off Basic setting: On	Defines the behaviour of the output on deactivating the sun protection. Only visible when the priority for the sun protection is 0.

Deactivate sun protection switching state	On, Off Basic setting: Off	Defines the behaviour of the output on deactivating the sun protection. Only visible when the priority for the sun protection is 0.
Priority, twilight	0...4 Basic setting: 0	Specifies the priority for recalling and removing a scene of type Twilight for the channel.
Activate twilight switching state	On, Off Basic setting: On	Defines the behaviour of the output on activating the twilight function.
Deactivate twilight switching state	On, Off Basic setting: Off	Defines the behaviour of the output on deactivating the twilight function. Only visible when the priority for the twilight function is 0.
Switch off brightness overshoot	On, Off Basic setting: On	Allows automatic switch-off according to the brightness. If the parameter is On, then the light controller switches off automatically when the brightness setpoint is greatly exceeded. This parameter is not yet active, as a light controller has not yet been implemented.
Switch on brightness undershoot	On, Off Basic setting: Off	Allows automatic switch-on according to the brightness. If the parameter is On, then the light controller switches on automatically when the brightness setpoint is greatly undershot. We recommend only using the parameter in connection with the parameter "Switch-off on brightness overshoot". This parameter is not yet active, as a light controller has not yet been implemented.
Invert switching output	On, Off Basic setting: Off	Inverts the switching output from NO contact function (factory setting) to NC contact function
Minimum switching repeat time	100 ms ... 10 sec Basic setting: 100 ms	Limits the switching speed of the device by increasing the value, in order to protect the load, for example. Only when the set time has elapsed is switching possible again. The last command during the blocking time is executed after a delay. The switching repeat time starts after each switching operation.

### Information window

During channel selection in the Information window, the following settings can be made or values displayed.

Display value	Explanations
Load state	The load can be switched on or off.
Restraint	Display of forced position status.
Operating hours	Display of the operating hours since the last restart in the Settings window <b>Einstellungen</b> .

### 6.3 Conformità

Con essa Gira Giersiepen GmbH & Co. KG dichiara che il tipo di impianto radio  
N. ord. 5448 02

è conforme alla direttiva 2014/53/UE. Il codice articolo completo è riportato sull'apparecchio. La versione integrale della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: [www.gira.de/konformitaet](http://www.gira.de/konformitaet)

### 6.4 Garanzia

La garanzia viene concessa tramite il rivenditore specializzato ai sensi delle disposizioni di legge.

Si prega di consegnare o di inviare gli apparecchi difettosi insieme ad una descrizione del guasto al rivenditore da cui sono stati acquistati (rivenditore specializzato/ditta di installazione/rivenditore di materiale elettrico). Costui inoltrerà poi gli apparecchi al Gira Service Center.

**Gira**  
**Giersiepen GmbH & Co. KG**  
Elektro-Installations-  
Systeme

Industriegebiet Mermbach  
Dahlienstraße  
42477 Radevormwald

Postfach 12 20  
42461 Radevormwald

Deutschland

Tel +49(0)21 95 - 602-0  
Fax +49(0)21 95 - 602-191

[www.gira.de](http://www.gira.de)  
[info@gira.de](mailto:info@gira.de)