Installation Instructions

Panel with lighting, push switch and two SCHUKO sockets outlets Panel with lighting, push switch and two socket outlets with earthing pin

#### **Device description**

The Gira Panel combines various lighting and electrical functions, and can be extended easily and quickly. Lighting, switches and wall sockets are not spread over the entire wall anymore: all control elements are conveniently arranged.

The Gira panel can be integrated in existing installations and existing lights can be connected to the builtin push-button switch.

The Gira panel is available in pure white, anthracite and aluminium.



Order no.: 1333 xx

Order no.: 1337 xx

#### Installation

### ▲ Note!

The installation and assembly of electrical equipment may only be performed by a qualified electrician.

The panel can only be installed vertically.

#### **GIRA** Info Panel with lighting, push switch Installation Instructions

Please assemble the panel as follows:

- 1. Drill the upper hole (A) and insert a plug.
- 2. Tighten the screw and the washer.
- 3. Hang the panel onto the screw and mark the fixing holes (B).
- 4. Remove panel.
- 5. Drill holes (B) and insert plugs.
- 6. Hang panel onto screw and tighten screws. Please use the washers provided to protect the openings from moisture.
- 7. Connect power supply.
- Install the light (fluorescent lamp: 13 W T 16). More information about the lighting can be found in the "Technical specifications".
- 9. Close the panel plates.

# 

**i** 

#### Using the lower cable reel


Wires which are fed in the lower panel inlet must be dismantled for the entire length. The wire's PVC mantel might release emollients when becoming warm, which could damage the light.

When laying the individual leads, use the cable harness behind the lighting reflector.

#### Connection


#### **Power supply**

The lighting element, the switches and socket outlets have already been pre-wired up to the connecting terminals. Connect the power supply to terminals  $L/N/\oplus$ .

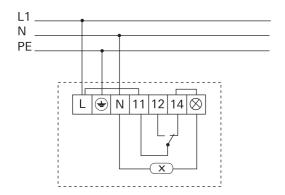

#### **Connecting additional lighting**

Additional lighting (e.g. ceiling lighting) which should be operated via the Panel's push switch are connected to the  $\otimes$ /N terminals.

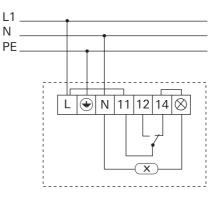

#### GIRA Panel with lighting, push switch Info


Installation Instructions

## GIRA

#### Integration in a two-way switch

To create a two-way switch, the bridge between terminals 14 and  $\otimes$  must first be removed. Connect the corresponding two-way switch to termi-

nals 12 and 14 and connect the switch wire to terminal  $\otimes$ .

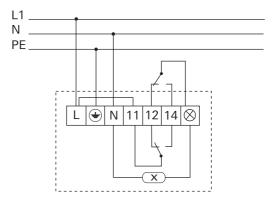



#### **Closing the Panel cover**

The cover can be closed once the panel is assembled and connected and the lighting has been fitted.

Place the lighting cover against the upper edge of the Panel's underside and press onto the casing (see illustration).

Place the lower cover onto the Panel and raise the Panel (see illustration).

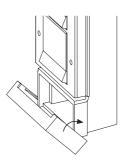




#### **Technical specifications**

Measurements:	WxHxD 112 x 990 x 70 mm	Socket:	G5
Classification:	IP 44	e.g.:	RADIUM NL-T5 13 W OSRAM L 13 W PHILIPS TL 13 W
Connections:	Screw clamps 1 x 2.5 mm <sup>2</sup> or 2 x 1.5 mm <sup>2</sup>		
Lighting:	Fluorescent lamp (T16)		
Power:	13 W		
Length:	517 mm		
Diameter:	16 mm		

.

Lighting range:

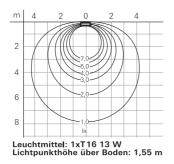

#### Acceptance of guarantee

We accept the guarantee in accordance with the corresponding legal provisions.

Please return the unit postage paid to our central service department giving a brief description of the fault:

Gira Giersiepen GmbH & Co. KG **Service Center** Dahlienstrasse 12 D-42477 Radevormwald

CE The CE sign is a free trade sign addressed exclusively to the authorities and does not include any warranty of any properties.

Gira Giersiepen GmbH & Co. KG Postfach 1220 D-42461 Radevormwald

Telefon: +49 / 21 95 / 602 - 0 Telefax: +49 / 21 95 / 602 - 339 Internet: www.gira.de